



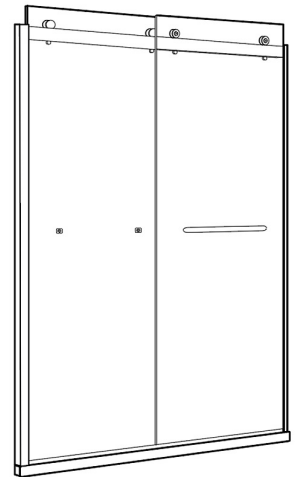

CAPITAL SERIES ENCLOSURE INSTALLATION INSTRUCTIONS

PARTS LIST

ITEM PART	DESCRIPTION	QTY
1 Wall Anchor	Plug	12
2 SL-CAP1503	Capital Wall Jamb	2
3 CA-CAP Jamb Bumpers	Wall Jamb Bumpers	12
4 N/A	ST 3.5x12 Screws	12
5 N/A	ST 4x45 Screws	6
6 CA-CAP952	Capital Anti-Jamb	4
7 CA-CAP 501E1x19	Roller	4
8 SL-CAP 1501	Capital Header	1
9	Glass Panel	2
10 N/A	ST 4x24 Screws	4
11 CA-CAP Bottom Bumpers	Bottom Bumpers	2
12 CA-CAP920	Capital Center Guide	1
13 SL-CAP1502	Capital Curb	1
14 CA-CAPC4101W	Capital Wall Clip	2
15 N/A	Screw Cap	8
16 N/A	ST 4x30 Screws	2
17 N/A	ST 5x30 Screws	2
18 CA-CAP-TB	Towel Bar	1

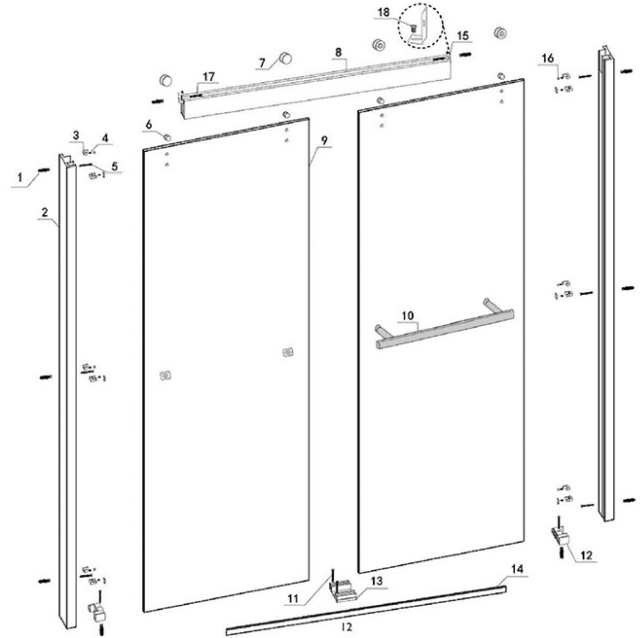

NOTE: Threads on rollers and anti-jumps require thread locker, sold separately. See instruction 4.

When ordering repair parts, please provide the following information:

1. Model Number
2. Part Number
3. Part Description
4. Finish Color

Required Tools:

To install your shower enclosure, you will need the following:

- Level
- #31 Drill Bit
- 3/16" Carbide Drill Bit (or tile walls)
- Phillips Screwdriver
- Silicone
- Hammer
- Tape Measure
- Failure to follow these installation instructions may result in unsafe conditions, including the risk of personal injury or property damage.
- Components may compress or settle over time; therefore, verify tightness and confirm completion of all installation steps several days after the initial installation.

134 MAIN STREET | LAGRANGE, GA 30240
O: (706) 350-4300 | F: (706) 350-4305
WWW.MGROUPOPCORP.COM



STEP 1

(See Figure 1). Ensure tray is level (1). Measure the position of wall profile (to be vertical) and mark the position, then put into wall plugs (2) (3). Insert the central guide into water guard (4). Place the water guard onto shower tray (5). Straighten wall profile and central guide.

STEP 2

(See Figure 2). Place guide wall onto rail profile (1). Measure and mark position of wall block, then mount with screws (2).

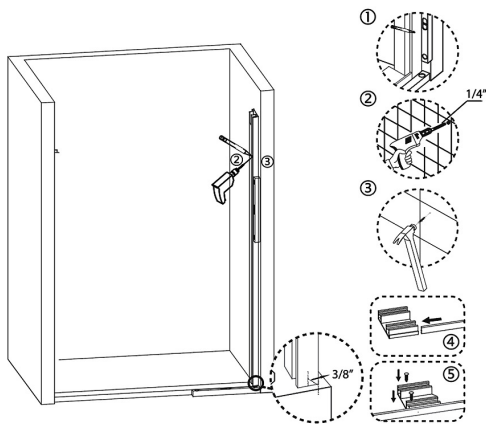


FIGURE 1

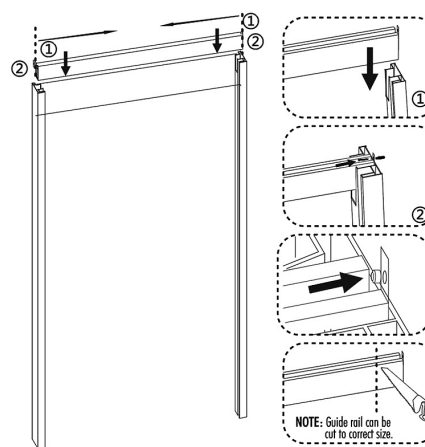


FIGURE 2

STEP 3

(See Figure 3). Install side stoppers then tighten the screws (1).

STEP 4

(See Figure 4). Install rollers and anti-jumping blocks (1) (2). Install the side guide at the bottom of vertical wall profile (3). NOTE: Thread locker (Loctite® brand or similar) is REQUIRED for all threads on rollers (part #7) and anti-jumps (part #6). Be sure to follow the manufacturers recommendations for cure times when making final adjustments. Thread locker is NOT included in the kit but is readily available at many hardware stores and from many online retailers.

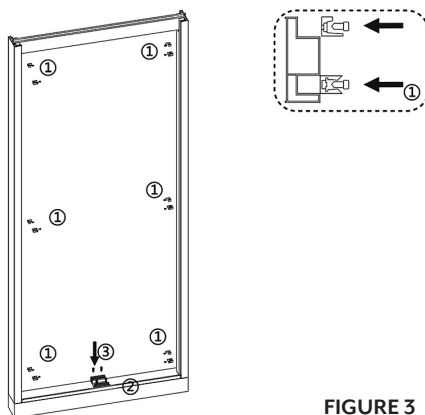


FIGURE 3

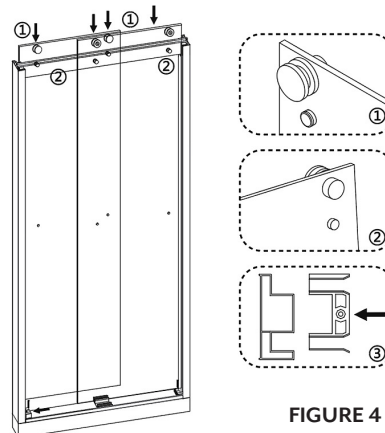


FIGURE 4

STEP 5

(See Figure 5). Install handle (1). Adjust roller until glass panel moves smoothly (2).

STEP 6

(See Figure 6). Apply good quality silicone sealant. Clean all joints areas as recommended.




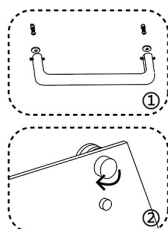


FIGURE 5

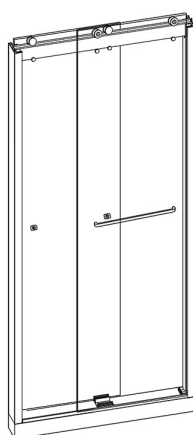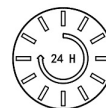

Allow 24 hours for sealant to set for before first shower

FIGURE 6

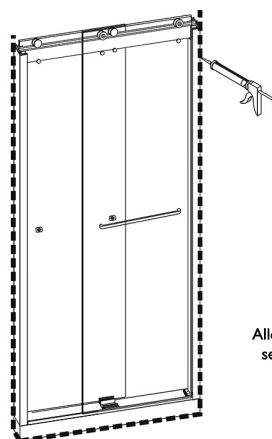

PREVENTATIVE MAINTENANCE GUIDE

BARN DOOR AND BYPASS SHOWERS

MALMO
MGD-1
E232
SKYLINE
CAPITAL
CELESTIAL


- Inspect shower doors frequently and adjust quarterly.
- Failure to follow this maintenance guide may result in unsafe conditions, including the risk of personal injury or property damage.

PROCEDURE:

1. Shower doors with moving components have the potential to come out of adjustment and require routine maintenance to ensure safety and proper performance.
 - a. Periodically, barn door wheel nuts should be checked for tightness and tightened if needed.
 - b. Remove the decorative cap on the opposite side of the wheel assembly.



- c. Use a 3mm Allen wrench to steady the screw while tightening or loosening the metal nut.

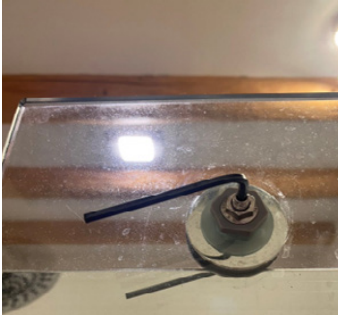

- d. For routine tightening, hold the Allen wrench steady and tighten the metal nut. Do not over tighten.
- e. Apply locktite BLUE to the threads.



- f. Reapply the decorative cap to hand tightened – this snugs onto the metal nut underneath.
2. The barn door wheels have an adjustable feature to allow the glass panels to be raised or lowered minimally.
- a. Periodically, ensure the shower door panels are set at the proper height above the shower pan curb to prevent rubbing with guides or the ground.
 - b. If needed, adjust the showers lower to the curb to prevent water leakage under the panels.
 - The sliding shower doors should never touch the base of the shower curb or the top of the floor guide slots.
 - c. Adjustment follows the tightening steps outlined above, except when the metal nut is loosened, adjustments to the plastic nut can be performed.
 - Remove the decorative cap on the opposite side of the wheel assembly.
 - Use a 3mm Allen wrench to steady the screw while tightening or loosening the metal nut.

- For height adjustments, hold the Allen wrench steady and loosen the metal nut enough to hand turn. Use a larger wrench to rotate the plastic nut to adjust the height of the glass panels. NOTE: adjustments should be coordinated for both wheels on the doors to ensure the glass panels are level.
 - Once adjusted, use the Allen wrench to steady the screw and appropriately tighten the metal nut. Do not over tighten.
 - Apply locktite BLUE to the threads.
 - Reapply the decorative cap to hand tightened – this snugs onto the metal nut underneath.
- d. Adjust the anti-jumper pieces as needed. If adjustments to the barn door wheels have been made, it's likely that the anti-jumpers should be adjusted. The rubber pieces of the anti-jumper should be within 1/16' of the top track to prevent derailment.



- e. The anti-jumper is loosened and tightened via a hole in the small side. Insert a 1 or 2mm Allen wrench to use as a pry to tighten and loose the anti-jumper assembly.
- f. Once adjusted, the anti-jumper should be tightened beyond hand tight using the pry hole and Allen wrench.