



DRIFT SINGLE BYPASS INSTALLATION INSTRUCTIONS


Barn Door Shower Enclosure Installation Instructions

76" OA Height

Fits Standard Opening Range of 54"-
60"

Customization Options Available

Our Drift single bypass sliding barn door is an adjustable, frameless shower enclosure accommodating up to 60" openings, with a 30" fixed panel on the shower head side. The dual slider trolley system smoothly glides along a 1" diameter rod designed to carry 10mm tempered glass door.


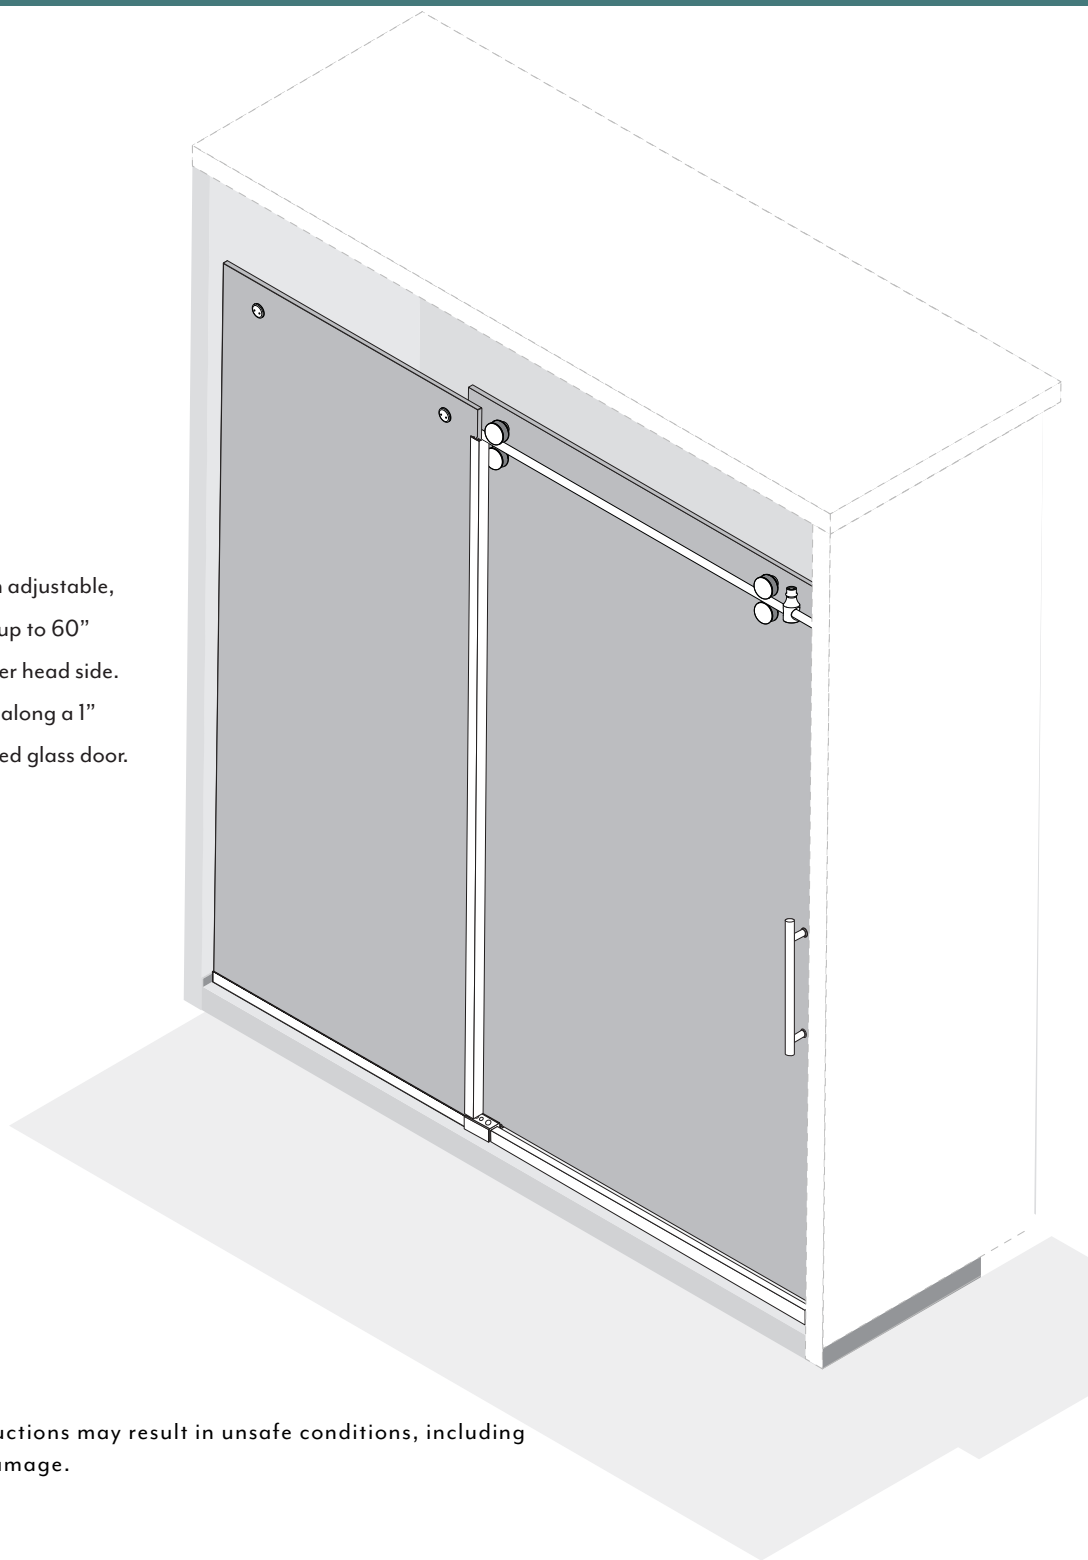


Failure to follow these installation instructions may result in unsafe conditions, including the risk of personal injury or property damage.


O: (706) 350-4300 | F: (706) 350-4305
WWW.MGROUPOCORP.COM




HARDWARE INCLUDED

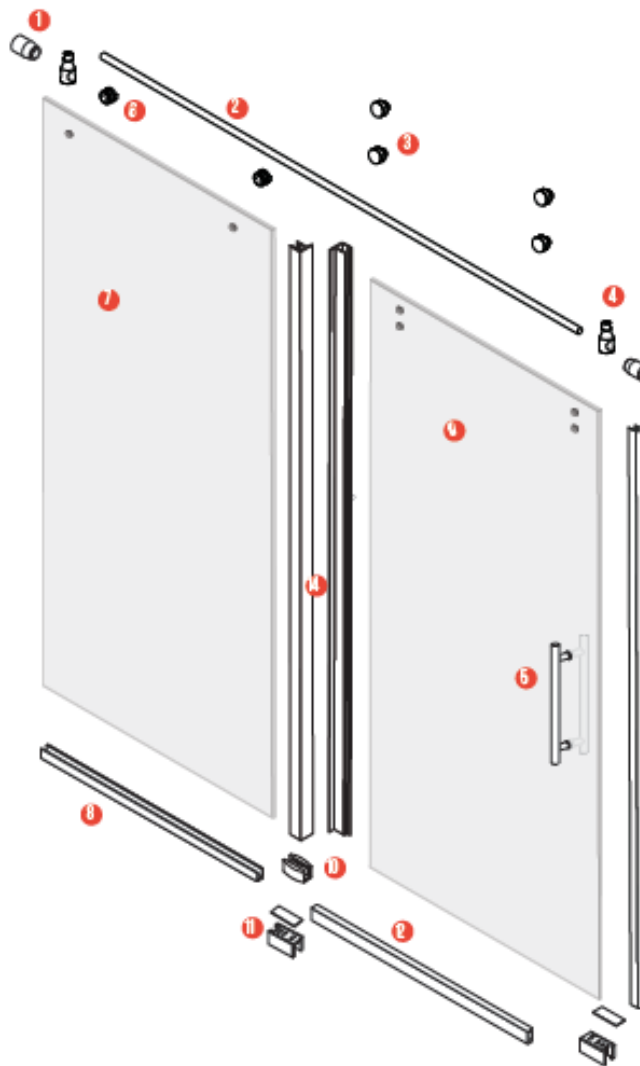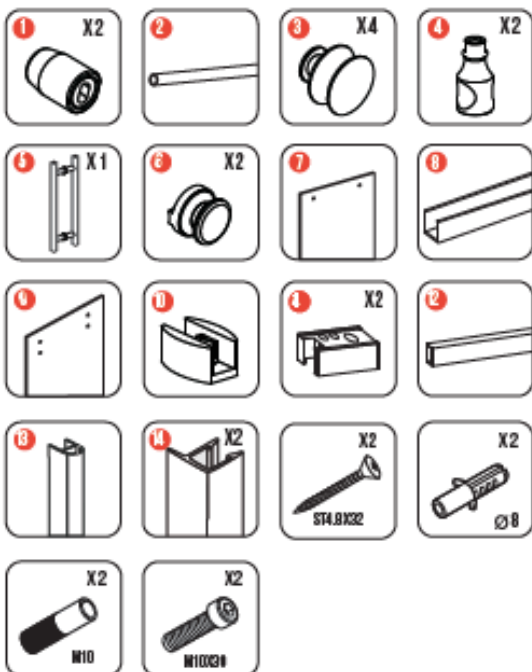

TOOLS NEEDED

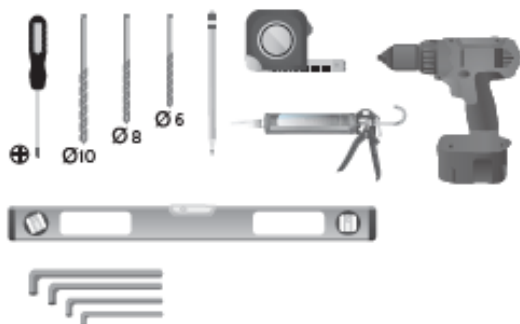

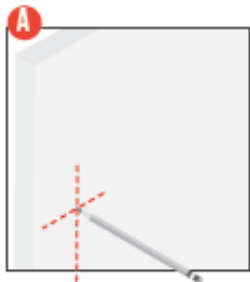


Step 1

A.1



Measure.

Standard height H-76" Hole location is H-2 3/4", mark hole at 73 1/4"

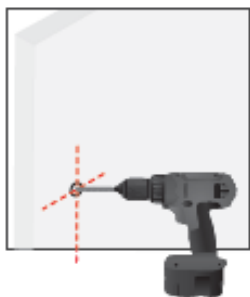

A.2

Drill holes. Note: Hole should be 3/8" (10mm) in diameter. The mounting bracket will give you about a 1/4" play up or down for the rod

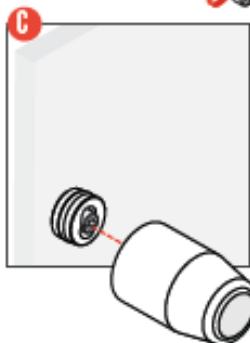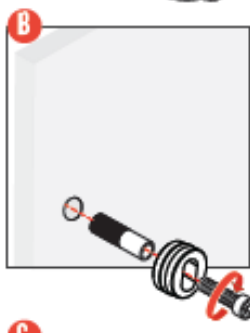


B.1


Ensure that there is proper blocking for expansion bolts to mount through. If not, the expansion bolts will not grip.


C.1

Attach rod mount

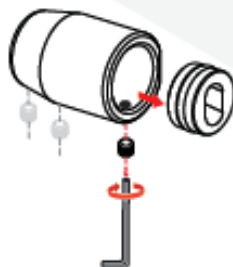

Provide thread-lock glue (Loc-Tite)

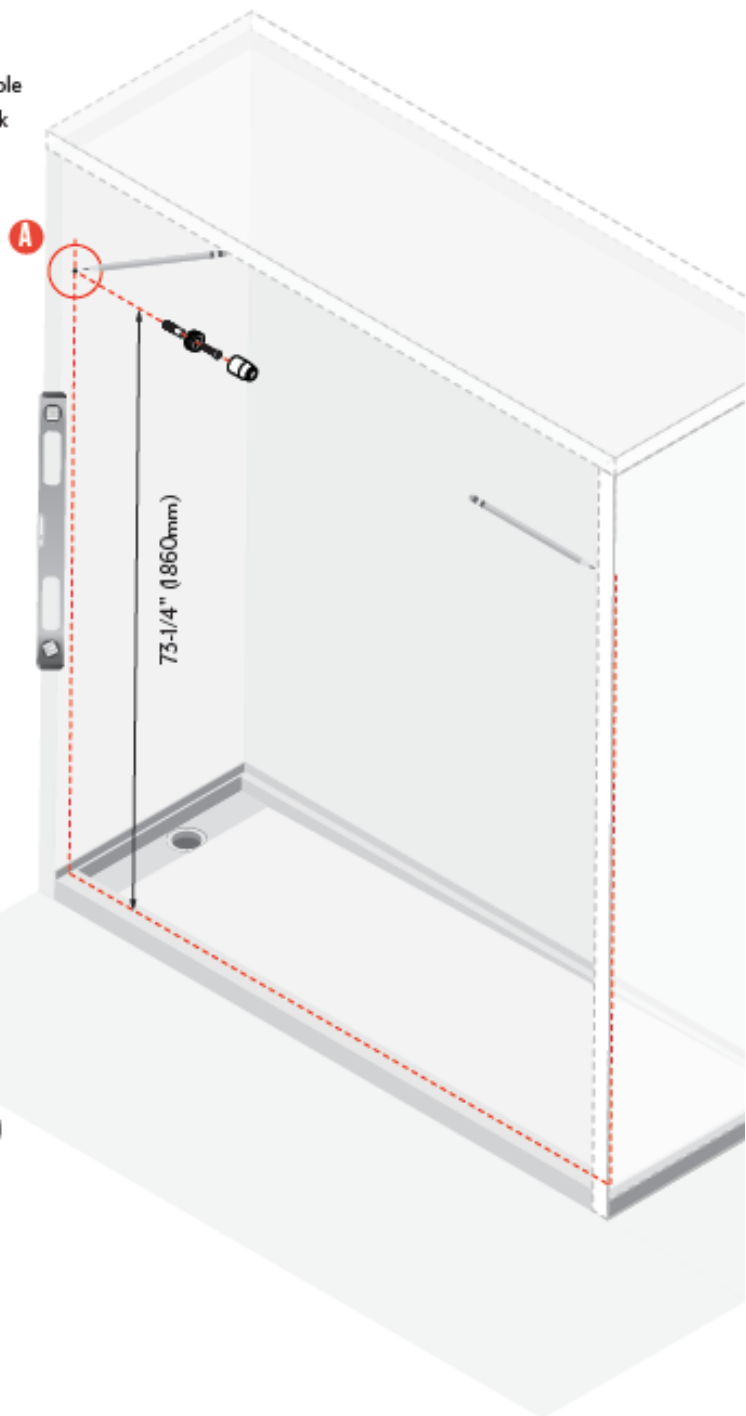


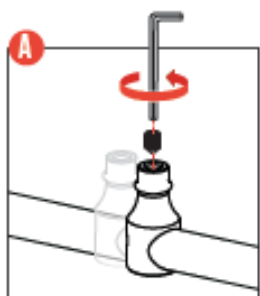

Step 2


A.1

Slide door stops onto rod and position accordingly

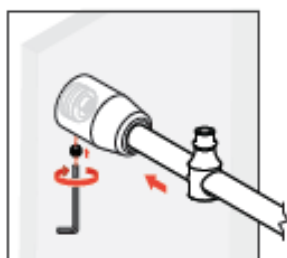


A.2


Tighten set screws and secure with loc-tite once rod is in desired position

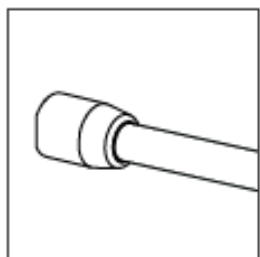

A.3

Make sure that the flat side of rod mount faces out to allow glass panel door to fully operate.

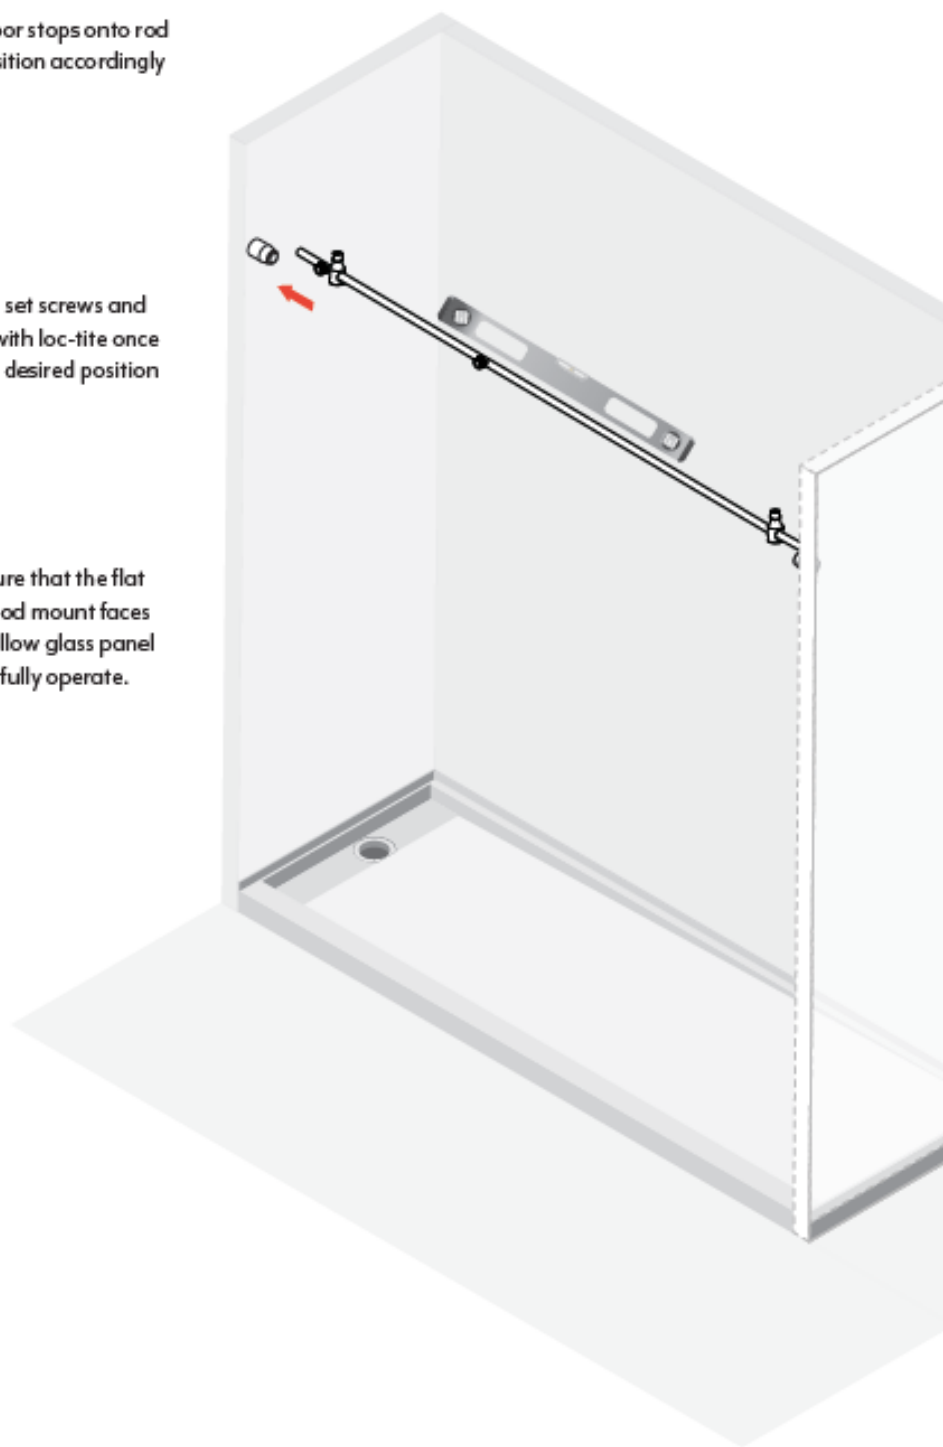


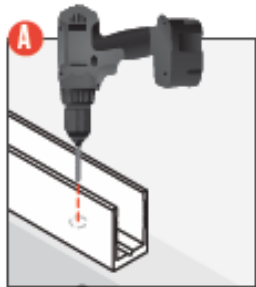

Step 3


A.1

Mark and drill holes

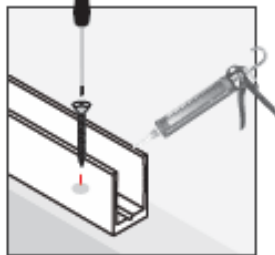


A.2

After mounting U-channel, silicone over the top of any fasteners used inside the channel prior to glass installation to seal any penetrations

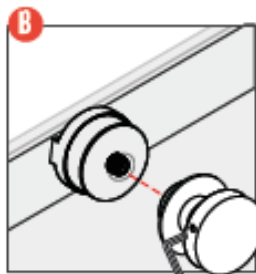


B.1


Mount fixed panel to brackets on rod

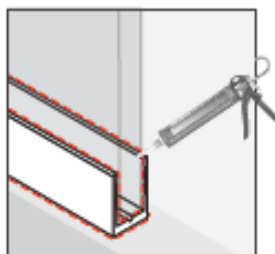

B.2

and drop panel into U-channel. Silicone both sides of the U-channel to the glass, and silicone the channel to the curb inside and out


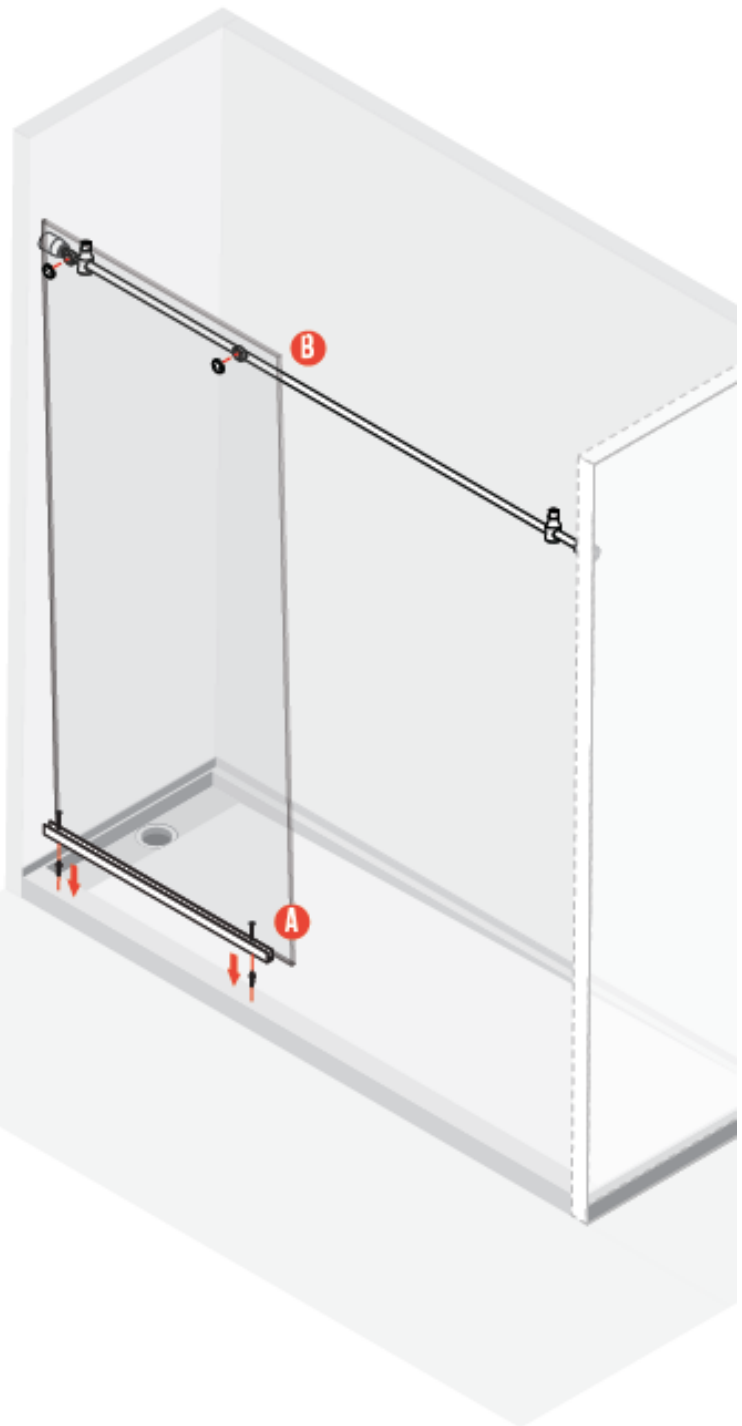


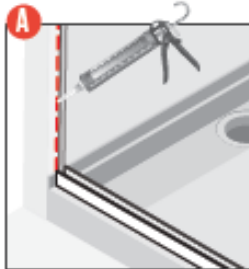

Step 4


A.1

Silicone glass to wall on vertical edge.

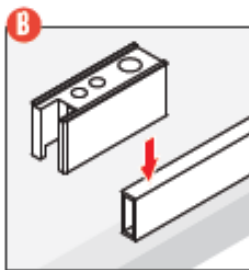


B.1

Insert rollers on to rails as pictured before attaching to glass doors.

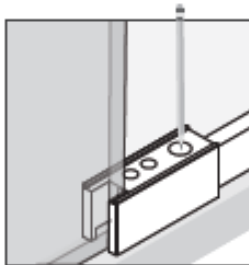


B.2

Water dam is recommended for optimal performance. The sliding door must be installed to the interior of the shower in order to use it

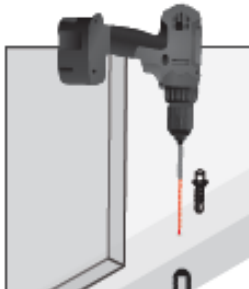


B.3


Drill holes and insert anchor

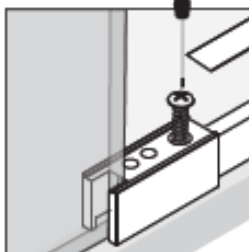

B.4

Insert screw and silicone over the top of fastener to seal any penetrations. Apply cover

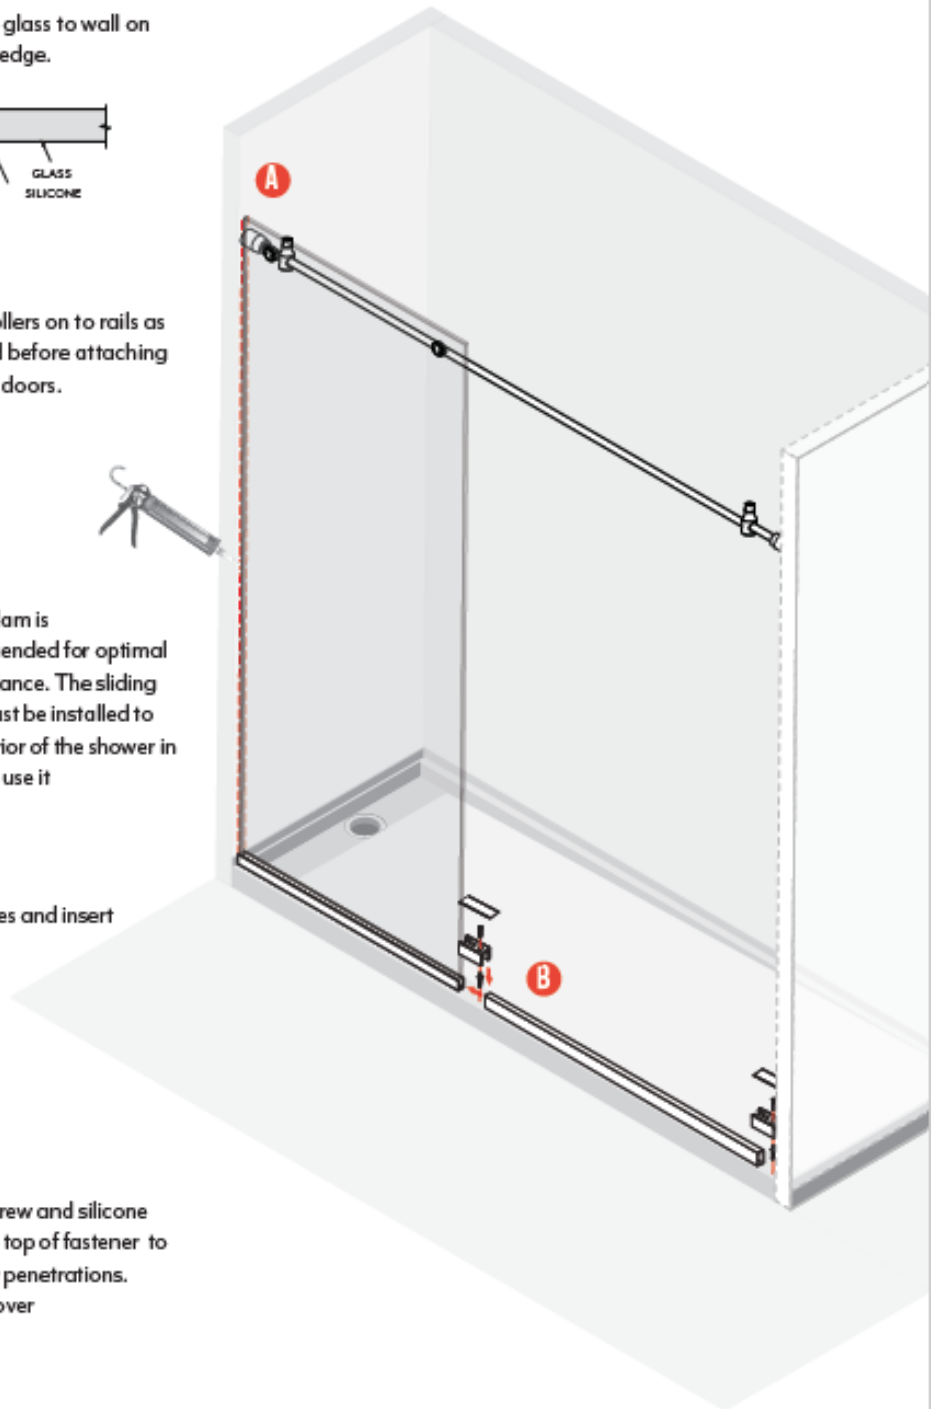


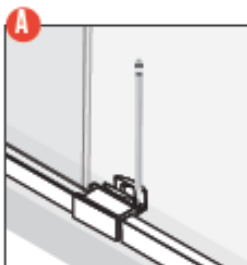

Step 5


A.1

Floor guide goes inside of the water dam and U-channel. Place and mark holes

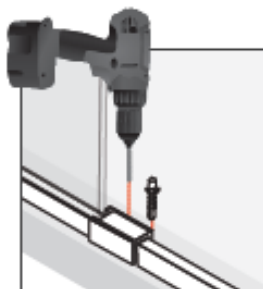


A.2

Drill holes and insert anchors for screws

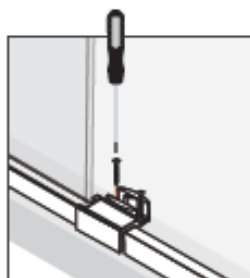


A.3

Mount floor guide and silicone over the top of fastener to seal any penetrations

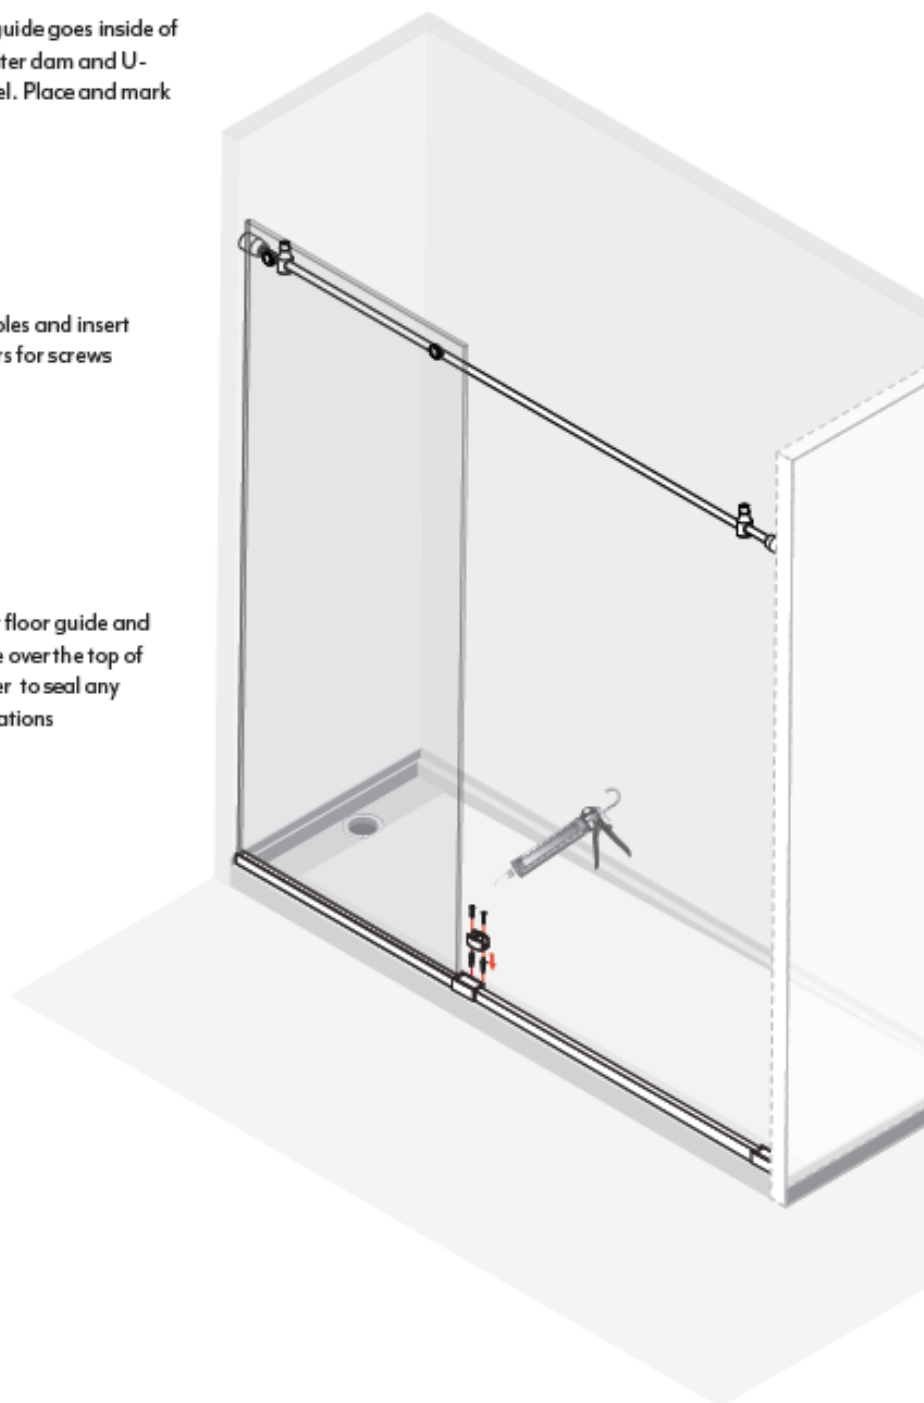

Step 6

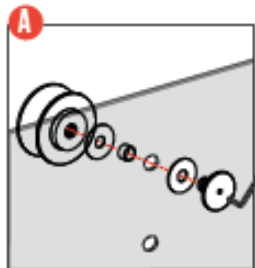

A.1

The four barn door trolleys include an offset grommet held in by a pin. This grommet will allow you to adjust the vertical and horizontal plumb about 1/4", by twisting the back side of the trolley.




Attention:
Take care not to break off the pin




A.2

Hang glass door onto rod

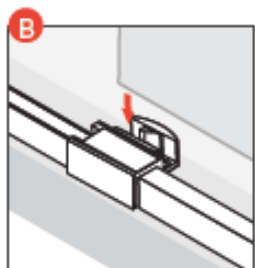


B.1


Align bottom guide to allow glass to run in a plumb condition

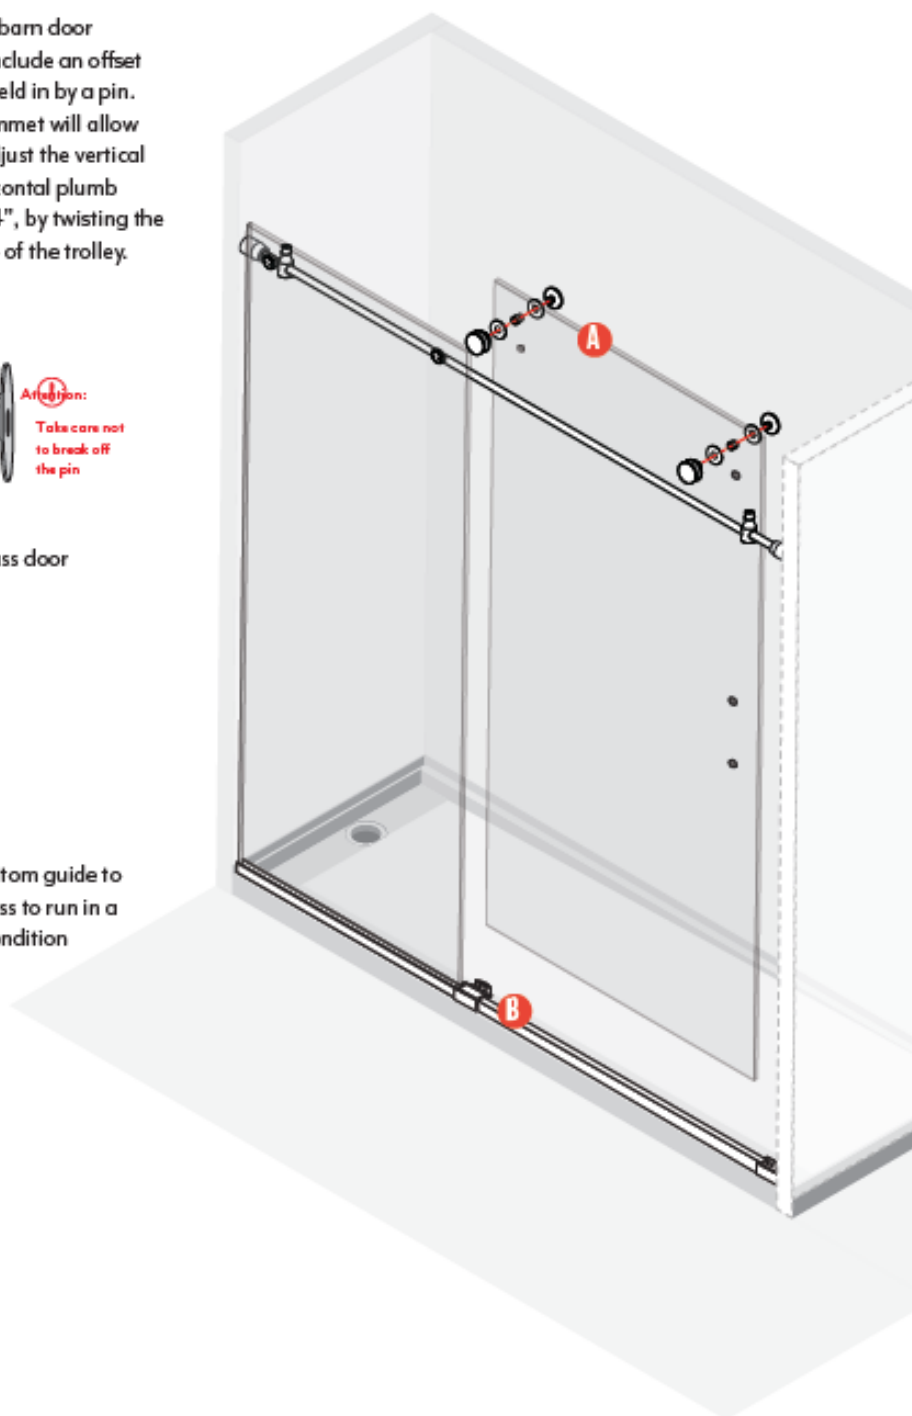


Step 6

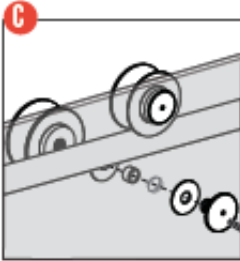


C.1
Install the bottom rollers using the same steps as the top

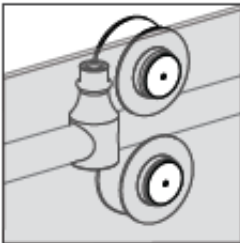


C.2

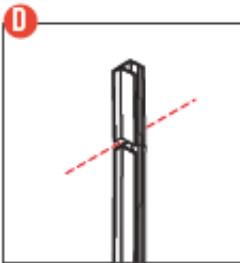


D.1
Trim seal to fit just below rod

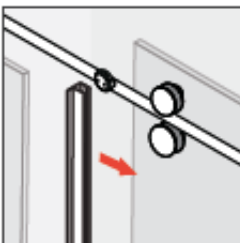


D.2
Trim and install seals for best performance against water escape and protection of glass edge
Align seal to ride just below track

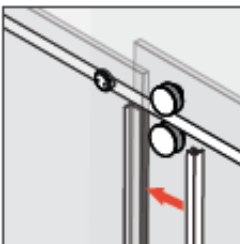


D.3

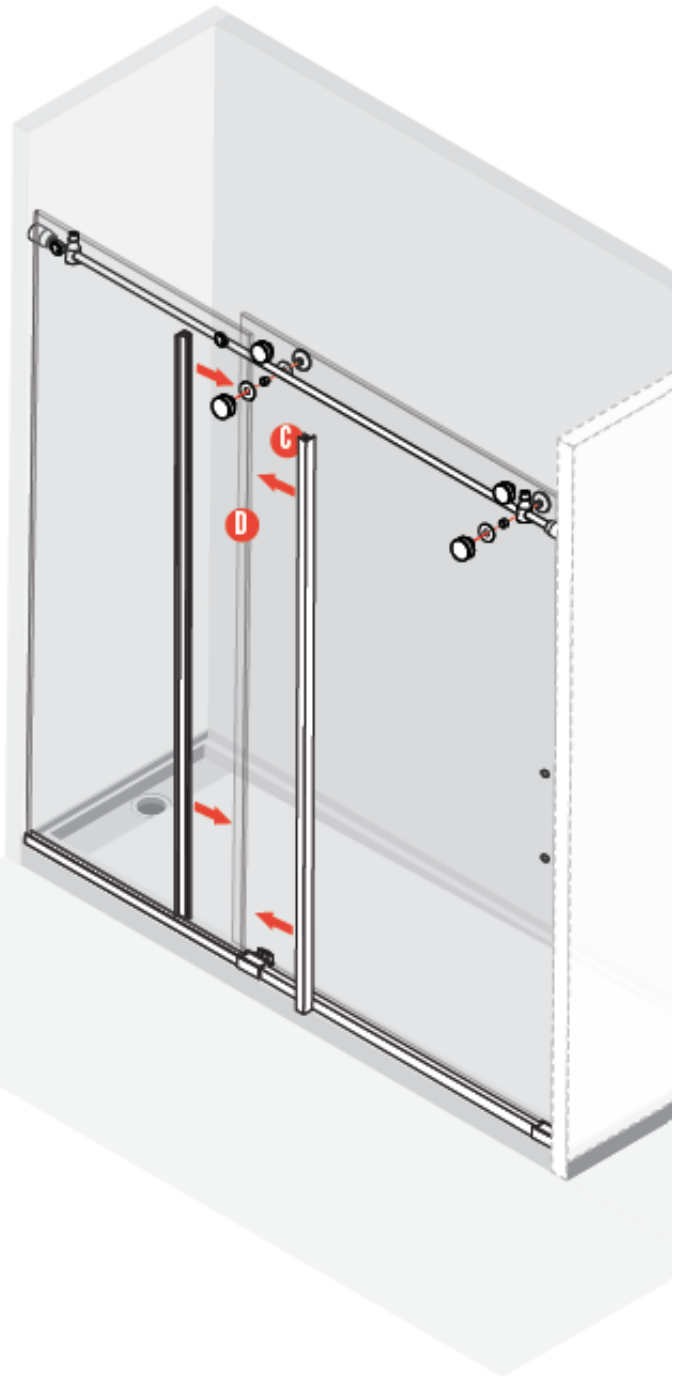


Step 7

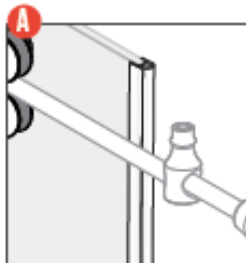


A.1
Apply seal to glass door

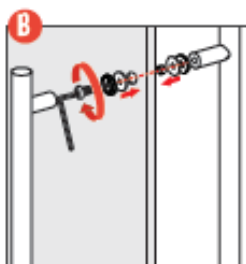


B.1
Install BTB pull

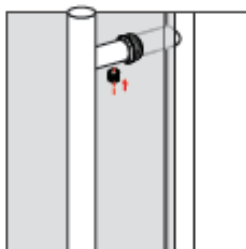


B.2
Install BTB pull

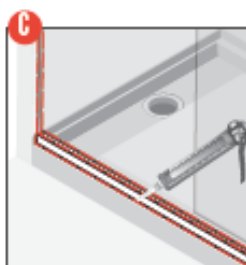

C.1
To complete install and prevent leakage run silicone inside and out along the u-channel and water dam
Double check the glass panel-to-wall seal

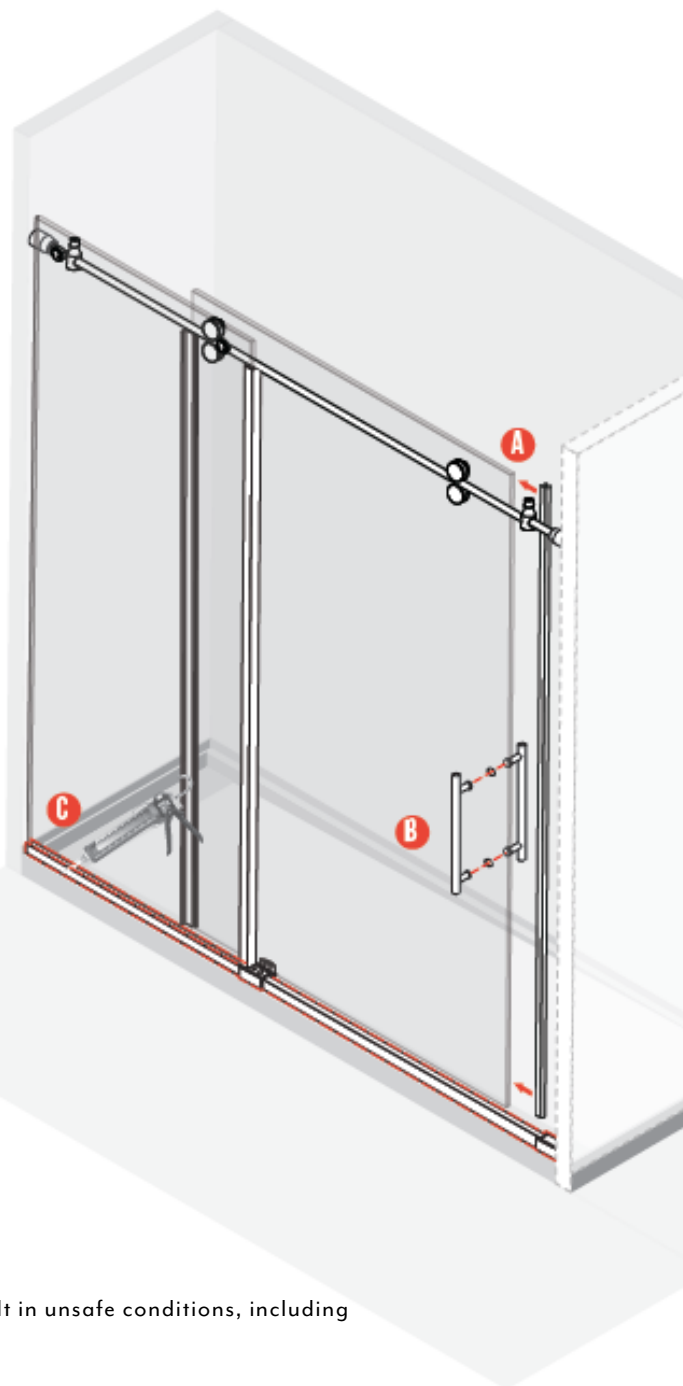

Failure to follow these installation instructions may result in unsafe conditions, including the risk of personal injury or property damage.

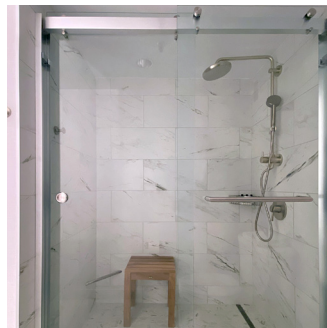


PREVENTATIVE MAINTENANCE GUIDE

BARN DOOR AND BYPASS SHOWERS


DRIFT SINGLE BYPASS
BASIN SINGLE BYPASS
CASCADE DOUBLE BYPASS
HARBOR DOUBLE BYPASS
STREAMLINE DOUBLE BYPASS
CURRENT DOUBLE BYPASS

- Inspect shower doors frequently and adjust quarterly.
- Failure to follow this maintenance guide may result in unsafe conditions, including the risk of personal injury or property damage.

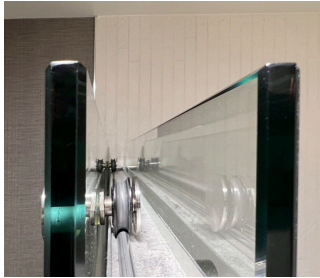


ROLLERS

Checking rollers and attachment to make sure they are not loose or damaged. Adjust and tighten as illustrated in installation instructions for the system you purchased.

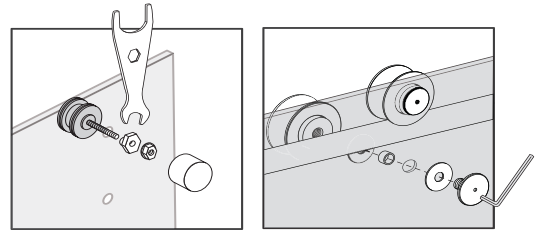


BUMPER SEAL FOR SYSTEM (CASCADE/DRIFT/BASIN)

Make sure these gaskets are not missing so the shower can properly seal as well as deter damage due to contact with surrounding substrates.

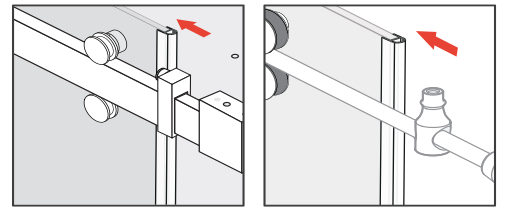

STOP INSTALLATION (DRIFT/BASIN) Stops need to be installed in such a manner that the glass does not contact the wall before the stop is engaged. Stop should be installed so there is a minimum of 1" clearance between handle and glass to avoid impact.


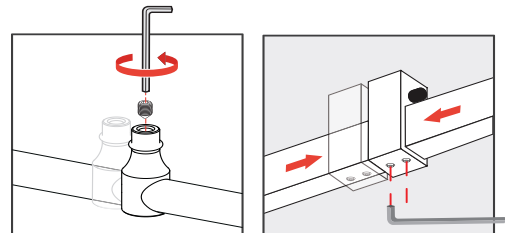


If stops are moved to improper locations they should be adjusted back into proper location and tightened per the installation instructions for the system you purchased.



GLASS CLEARANCE AT BOTTOM

If the glass is very close or dragging on the base of the shower it requires roller adjustment to move the glass a safe distance away from the curb or floor. Refer to installation instructions to properly adjust.

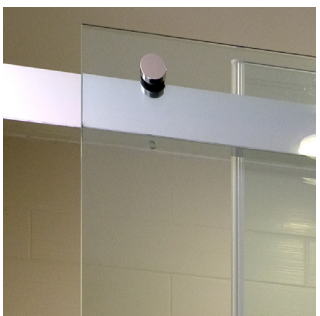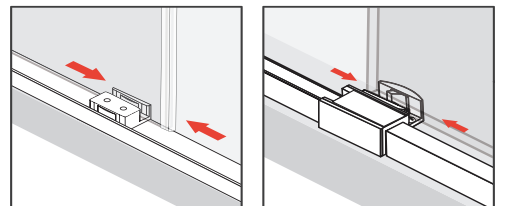

ANYTHING MISSING OR LOOSE?

All components of the complete shower system are critical to safe and reliable operation. If your shower is missing any component please contact us immediately for replacement parts to bring the shower into proper working order. Track systems or fixed perimeter metal systems that have become loose from the wall to which they are anchored should be investigated and secured immediately.