




FIESTA DELUXE INSTALLATION INSTRUCTIONS

Shower Enclosures:

- Model HGSE6071: 60" width x 71" height
- Model HGSE6076: 60" width x 76" height
- Model HGSE4871: 48" width x 71" height
- Model HGSE4876: 48" width x 76" height

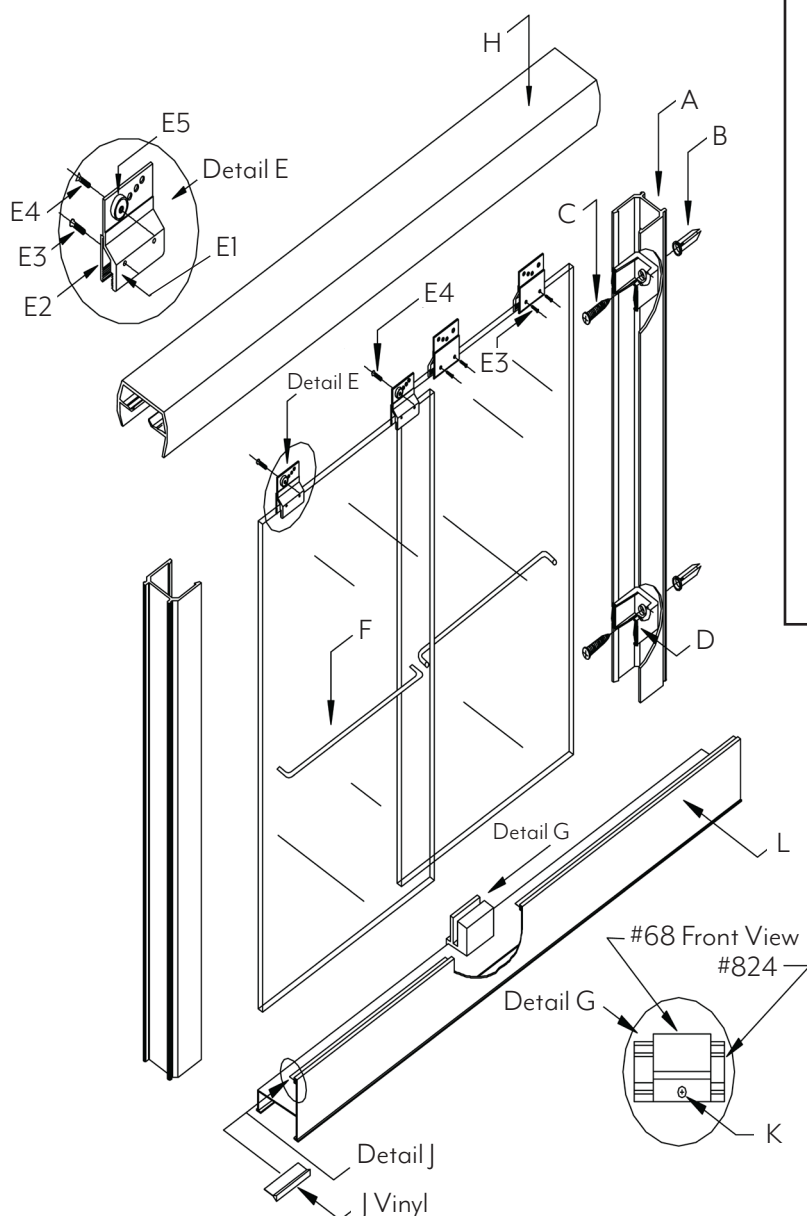

When ordering replacement parts, refer to the part number, description, and model number.

Key Letter	Part Number	Part Description	Qty.
A	605	Wall jamb	2
B	64	Wall anchor	
C	43	Installation screw (8x1 PH pan SMS)	4
D	69	Bumper	4
E1	822	Glass bracket	4
E2	823	Glass bracket	4
E3	51	Glass bracket screw (6-32x1/2 pan)	8
E4	40	Roller screw (8-32x3/8 PH truss)	4
E5	23	Roller	4
F		Towel bar	2
G	68	Track guide	1
H	801	Header	1
J	90	Track vinyl	1
K	42	Track screw (6x3/8 PH SMS)	1
L	824	Track	1

Glaze includes glass



KD Does not include glass



1. Measure bottom of opening, deduct 1/4", then cut bottom track to size.
2. Locate mid-point of track in channel provided, drill 1/8" hole at mid-point.
3. Apply a bead of caulk to bottom of track and set in place.
4. Put one wall jamb in place and mark holes on wall, remove jamb, then, using a 3/16" masonry bit drill holes in the wall. Insert one plastic wall anchor in each hole. Thread 8x1 installation screw through bumper provided and secure jamb to wall using this assembly. Repeat procedure with other jamb.
5. Measure width of opening (wall to wall) above the jambs. Cut header to this size minus 1/8".
6. Install header on jambs.
7. Install rollers on glass clips using 8-32x1/4" screws.
8. Hang panels on header.
9. Using 6x3/8" screw, attach track guide to track using hole previously drilled.
10. Install towel bar on outside panel.

BEWARE:

1. When measuring, look out for towel bars, electric switches, paper holders, tile obstruction, etc.
2. All measurements to be taken facing the enclosure while standing in the bathroom.
3. Make sure you have accurate measurements between the arrows for your shower enclosure.

