



STREAMLINE DOUBLE BYPASS INSTALLATION INSTRUCTIONS


Framed By-Pass Shower Enclosure Installation Instructions

60" Top track mounted to 78" tall
side rails

Customization Options Available

Smooth gliding rollers and elegant lines frame this
by-pass shower enclosure. Simple, space saving
design creates a modern look and versatile shower
operation.



Failure to follow these installation instructions may result in unsafe
conditions, including the risk of personal injury or property damage.

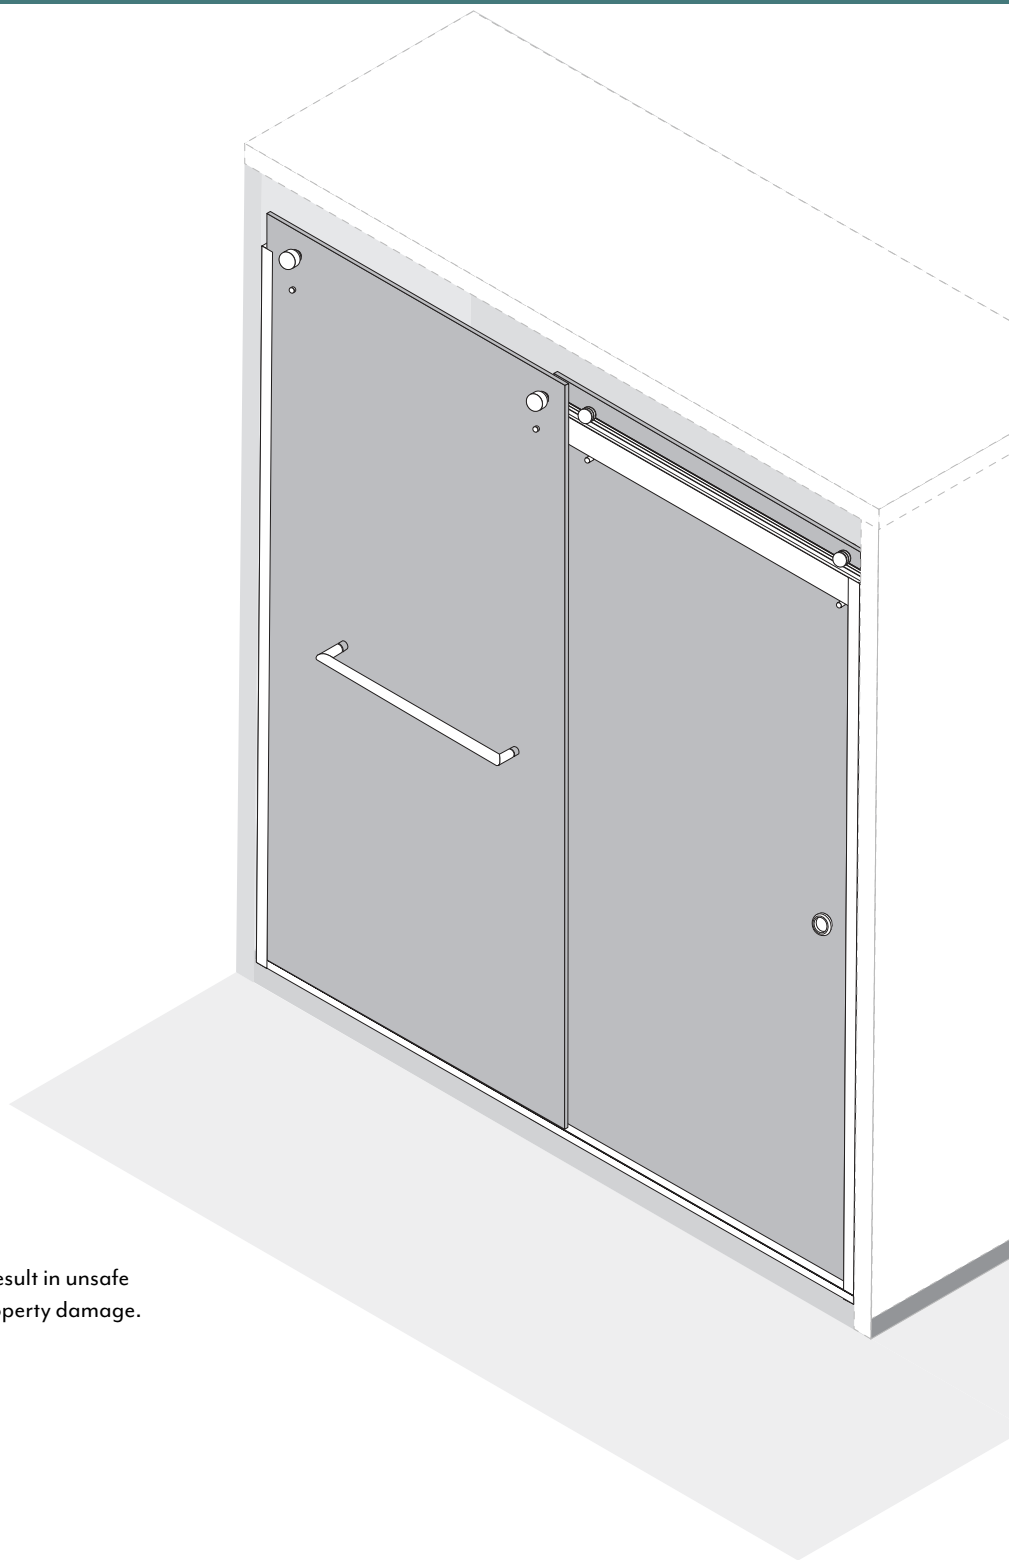

O: (706) 350-4300 | F: (706) 350-4305
WWW.MGROUPOCORP.COM




HARDWARE INCLUDED

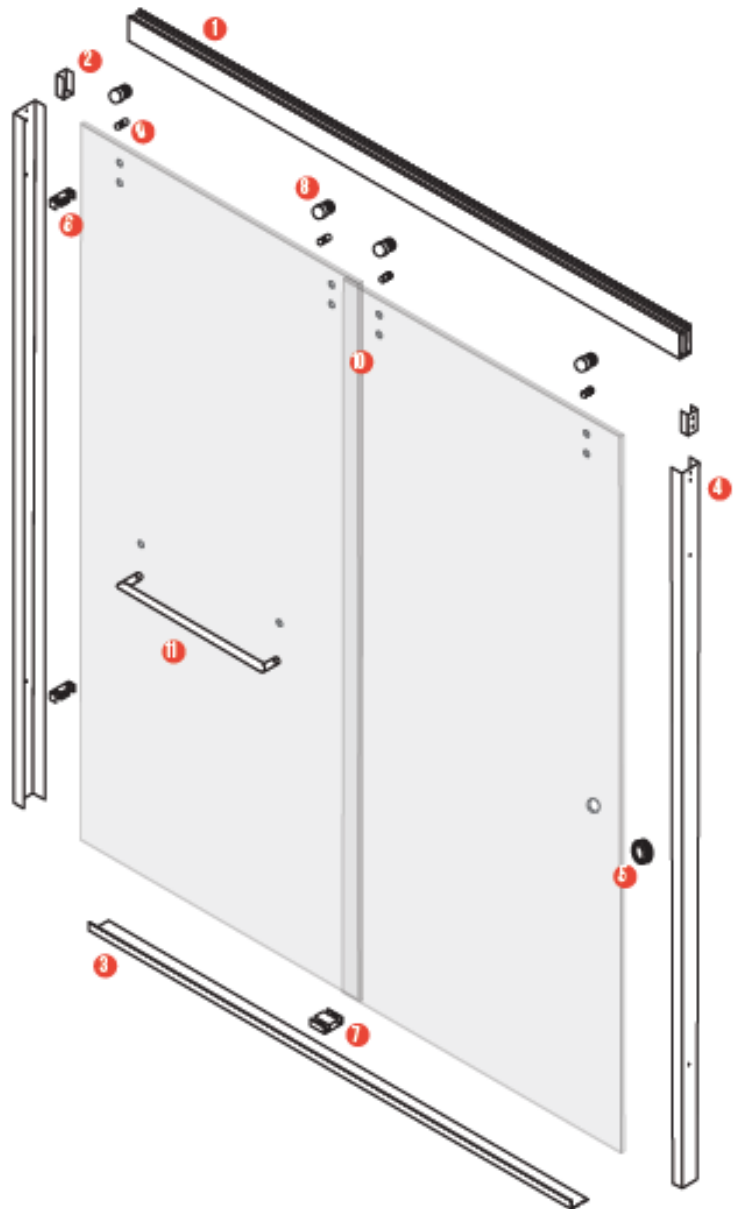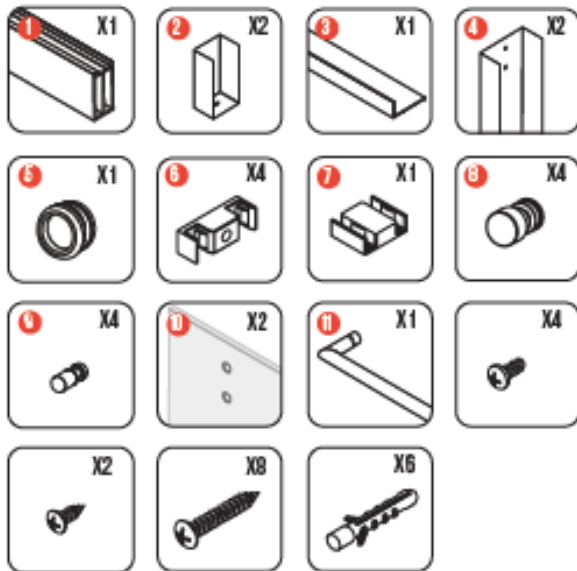


TOOLS NEEDED




Step 1

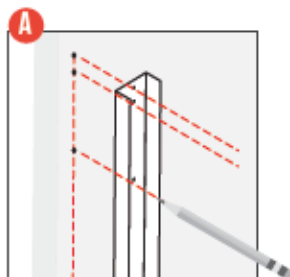


A.1
Jambs to be installed in a plumb condition to insure glass can travel on the correct path across the opening

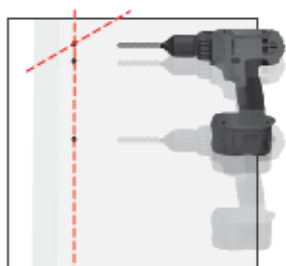


A.2
Drill holes

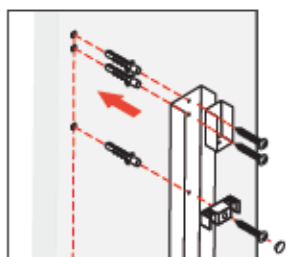

A.3
Mount top brackets and guides

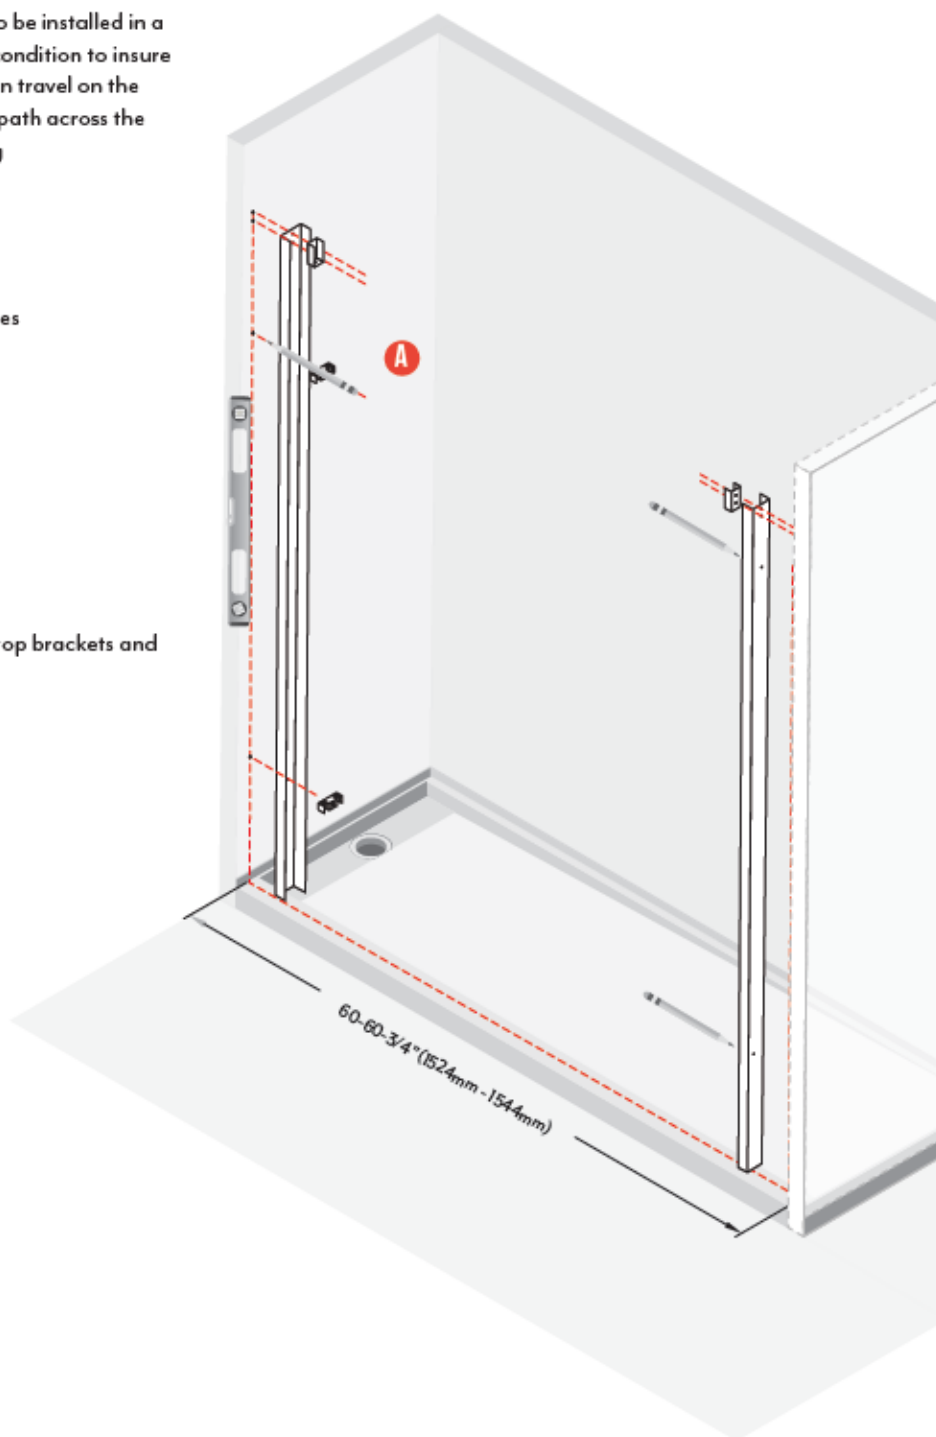


Step 2

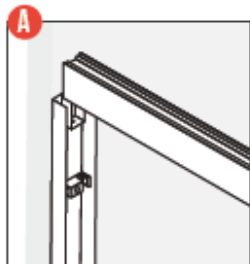


A.1

Drop top rail onto brackets and confirm level

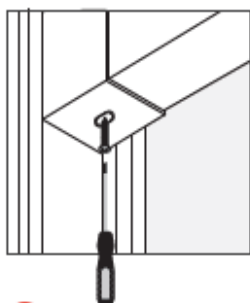


A.2

Use included hardware to mount top rail into place

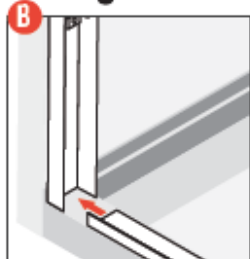


B.1

Caulk interior joint where vertical jambs and sill meet in corners

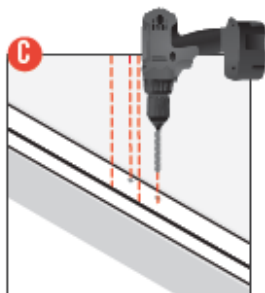


C.1

Measure and mark holes for bottom guide. Drill holes through the sill plate only, not into the shower curb

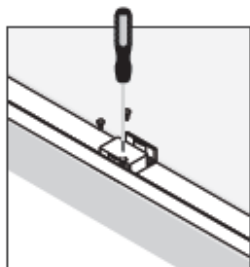


C.2

Mount screws in to guide.

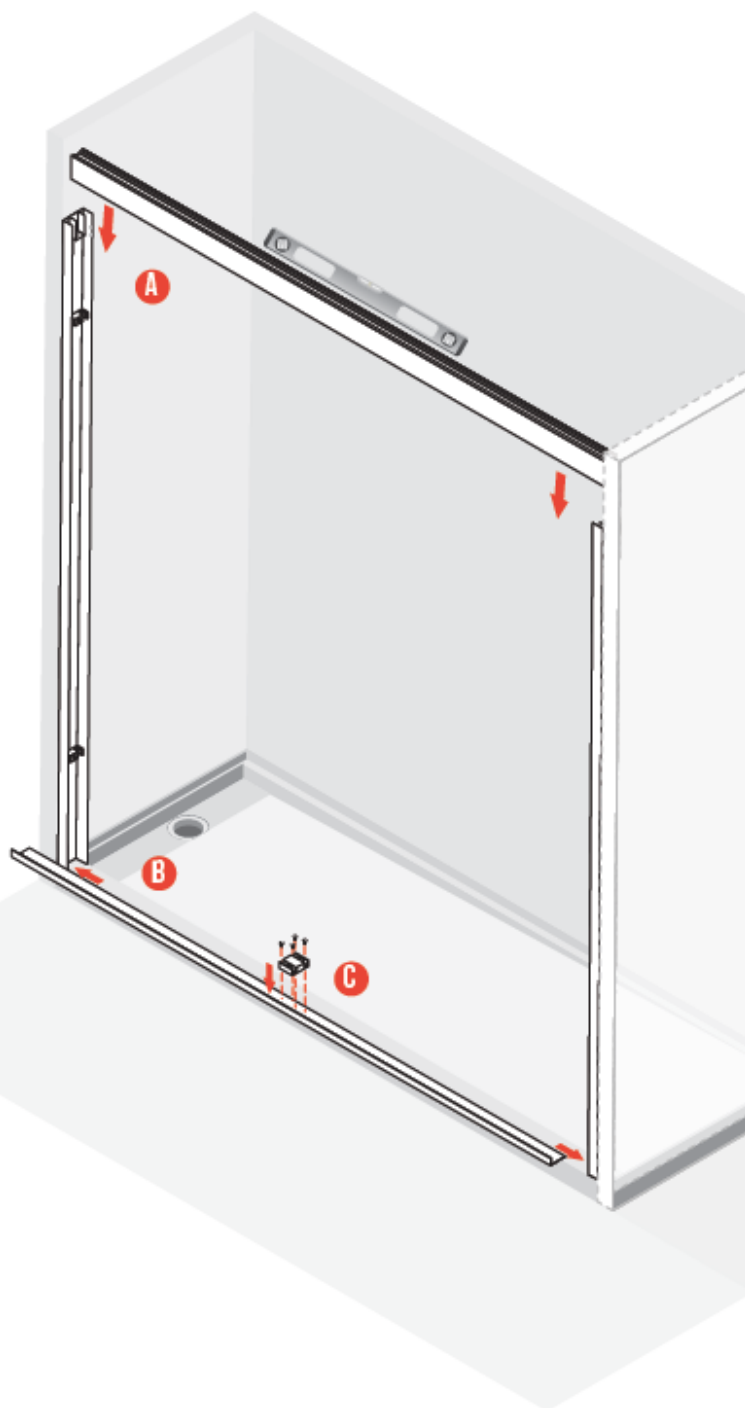


Step 3

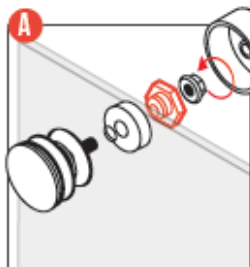

A.1


Adjustment grommet allows the door to be moved up or down 3/16"

It is recommended that the roller be adjusted to allow Minimum spacing between the bar and anti-jump

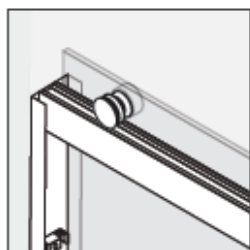


A.2

Rollers should align level on top of rail

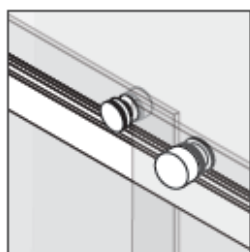


A.3

Attach rollers on second door and align on top rail

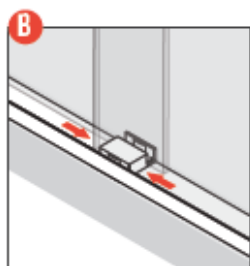


B.1

Position doors to evenly slide into the panel guide


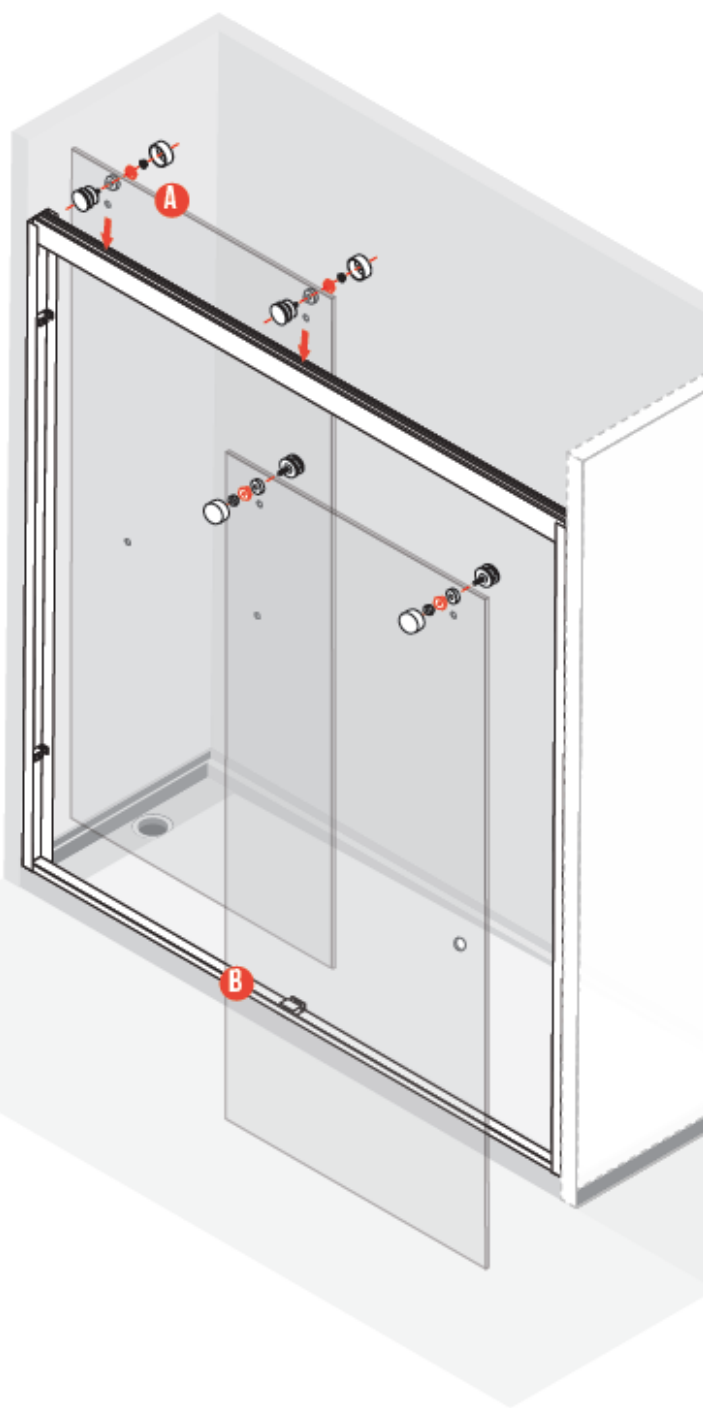


Step 4

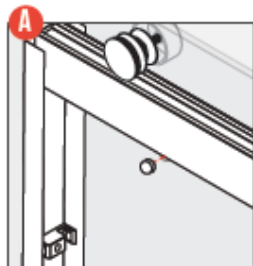


A.1

Adjust roller for minimum distance from anti-jump to bottom of track as possible while maintaining desired glass adjustment

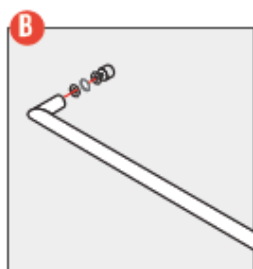


B.1

Install towel bar

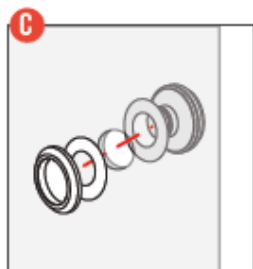

C.1

Install pull

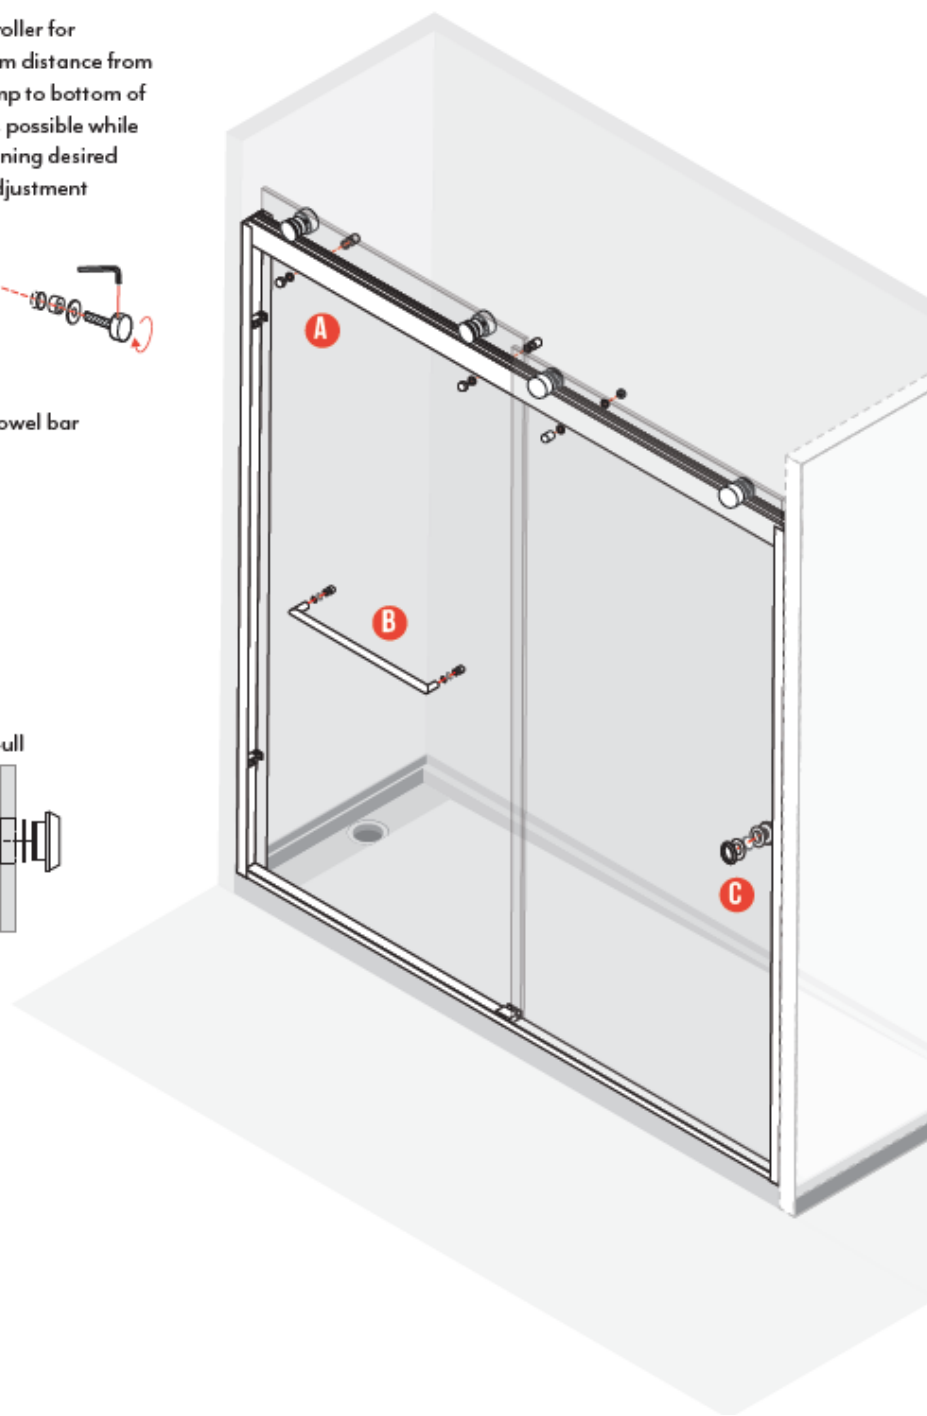



STREAMLINE DOUBLE BYPASS INSTALLATION INSTRUCTIONS

Step 5

A.1


Apply silicone sealant
to prevent leakage



Failure to follow these installation instructions may result in unsafe conditions, including the risk of personal injury or property damage.

O: (706) 350-4300 | F: (706) 350-4305
WWW.MGROUPCORP.COM



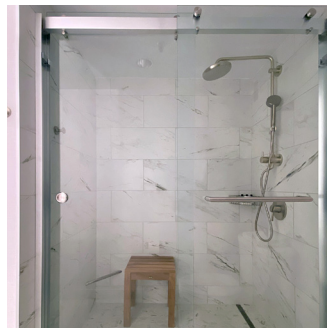


PREVENTATIVE MAINTENANCE GUIDE

BARN DOOR AND BYPASS SHOWERS


DRIFT SINGLE BYPASS
BASIN SINGLE BYPASS
CASCADE DOUBLE BYPASS
HARBOR DOUBLE BYPASS
STREAMLINE DOUBLE BYPASS
CURRENT DOUBLE BYPASS

- Inspect shower doors frequently and adjust quarterly.
- Failure to follow this maintenance guide may result in unsafe conditions, including the risk of personal injury or property damage.

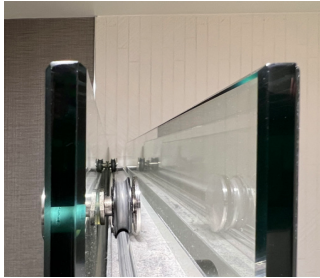


ROLLERS

Checking rollers and attachment to make sure they are not loose or damaged. Adjust and tighten as illustrated in installation instructions for the system you purchased.

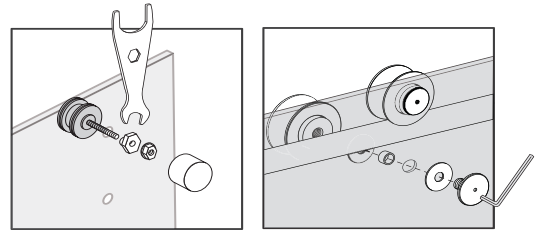


BUMPER SEAL FOR SYSTEM (CASCADE/DRIFT/BASIN)

Make sure these gaskets are not missing so the shower can properly seal as well as deter damage due to contact with surrounding substrates.

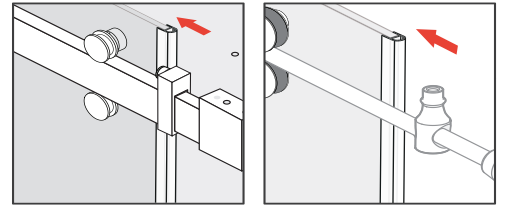

STOP INSTALLATION (DRIFT/BASIN) Stops need to be installed in such a manner that the glass does not contact the wall before the stop is engaged. Stop should be installed so there is a minimum of 1" clearance between handle and glass to avoid impact.


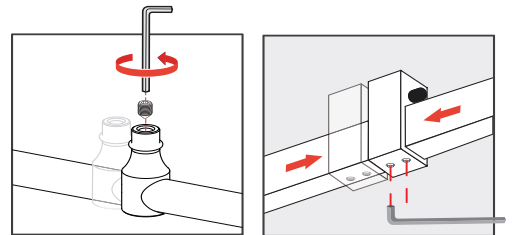


If stops are moved to improper locations they should be adjusted back into proper location and tightened per the installation instructions for the system you purchased.



GLASS CLEARANCE AT BOTTOM

If the glass is very close or dragging on the base of the shower it requires roller adjustment to move the glass a safe distance away from the curb or floor. Refer to installation instructions to properly adjust.

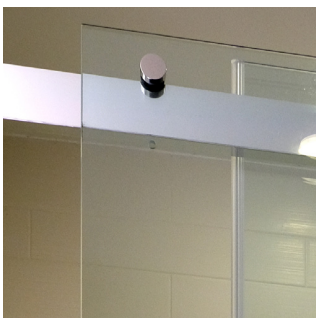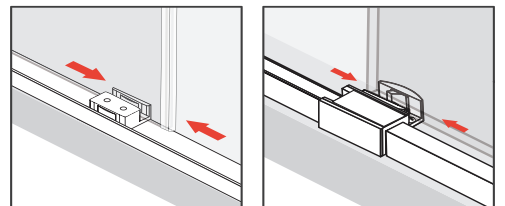

ANYTHING MISSING OR LOOSE?

All components of the complete shower system are critical to safe and reliable operation. If your shower is missing any component please contact us immediately for replacement parts to bring the shower into proper working order. Track systems or fixed perimeter metal systems that have become loose from the wall to which they are anchored should be investigated and secured immediately.